


REPLACEMENT


1. PREVENT GASOLINE FROM SPILLING OUT (SEE PAGE 11-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
3. REMOVE REAR SEAT CUSHION ASSEMBLY (SEE PAGE 72-51)
4. REMOVE REAR FLOOR SERVICE HOLE COVER (SEE PAGE 11-26)
5. SEPARATE FUEL PUMP TUBE SUB-ASSY (SEE PAGE 11-26)
6. DRAIN FUEL
7. REMOVE EXHAUST PIPE ASSY CENTER (SEE PAGE 11-35)
8. DISCONNECT PARKING BRAKE CABLE ASSY NO.2 (SEE PAGE 11-35)
9. DISCONNECT PARKING BRAKE CABLE ASSY NO.3 (SEE PAGE 11-35)
10. REMOVE FUEL TANK ASSY (SEE PAGE 11-35)

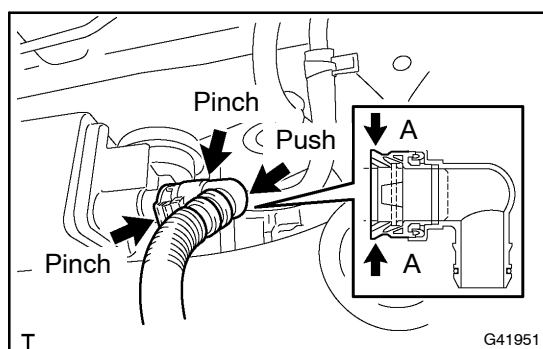

11. REMOVE CHARCOAL CANISTER ASSY

- (a) Disconnect the fuel tank vent hose from the charcoal canister.


- (1) Push the connector deep inside.
- (2) Pinch portion A.
- (3) Pull out the connector.

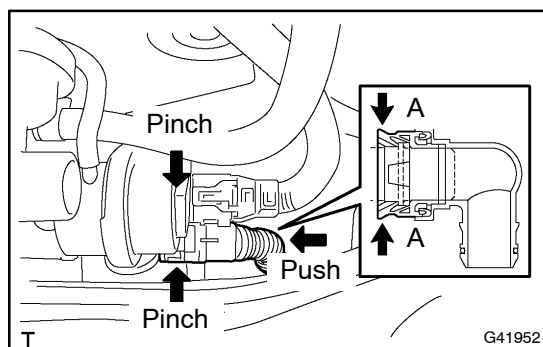

- (b) Disconnect the charcoal canister filter sub-assy from the charcoal canister.

- (1) Push the connector deep inside.
- (2) Pinch portion A.
- (3) Pull out the connector.

- (c) Disconnect the vapor pressure sensor connector.
 (d) Disconnect the wire harness clamp.
 (e) Disconnect the purge line hose from the charcoal canister.

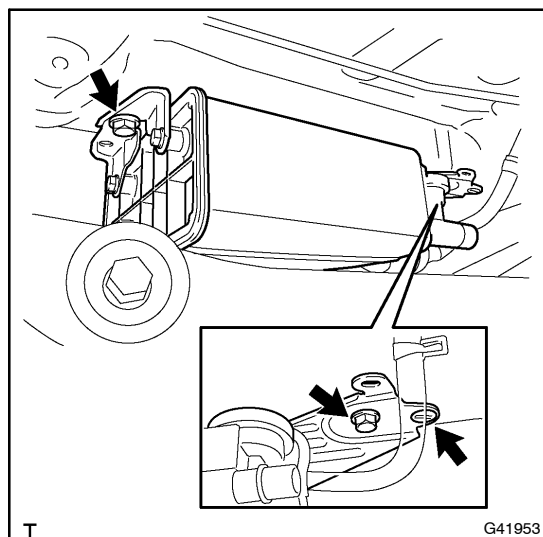

- (f) Remove the 2 bolts, clip and charcoal canister.

12. INSTALL CHARCOAL CANISTER ASSY

- (a) Install the 2 bolts, clip and charcoal canister.
Torque: 36 N·m (367 kgf·cm, 27 ft·lbf)
- (b) Connect the purge line hose to the charcoal canister.
- (c) Connect the wire harness clamp.
- (d) Connect the vapor pressure sensor connector.
- (e) Connect the charcoal canister filter sub-assy to the charcoal canister.
- (f) Connect the fuel tank vent hose to the charcoal canister.

13. INSTALL FUEL TANK ASSY (SEE PAGE 11-35)**14. INSTALL PARKING BRAKE CABLE ASSY NO.3 (SEE PAGE 11-35)****15. INSTALL PARKING BRAKE CABLE ASSY NO.2 (SEE PAGE 11-35)****16. INSTALL EXHAUST PIPE ASSY CENTER (SEE PAGE 11-35)****17. CONNECT FUEL PUMP TUBE SUB-ASSY (SEE PAGE 11-26)****18. ADD FUEL****19. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL****20. CHECK FOR FUEL LEAKS (SEE PAGE 11-8)****21. CHECK FOR EXHAUST GAS LEAKS****22. INSTALL REAR FLOOR SERVICE HOLE COVER (SEE PAGE 11-26)****23. INSTALL REAR SEAT CUSHION ASSEMBLY (SEE PAGE 72-51)****24. PERFORM INITIALIZATION (SEE PAGE 01-19)**

Some systems need initialization when disconnecting the battery terminal.